



**QCY H4**  
Wireless Noise Cancelling Headset



For better use experience, please scan to download QCY APP before start-up.

**What's in the Box**



Headset



Charging cable




Audio cable



User manual

All pictures of the product, accessories and UI involved in this document are for reference only yet practical may vary due to product update.

**Overview**

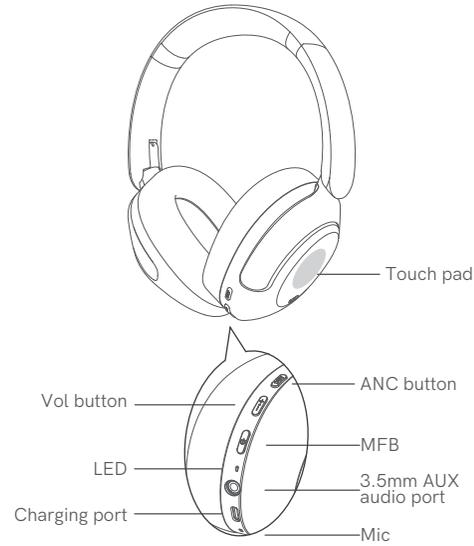

**How to Use**

**Power on/off:**  
Press and hold MFB for 2s to power on headset(LED turns on white for 2s). Press and hold MFB for 4s to power off(LED turns on red for 1s).

**How to Turn Connectable:**  
1. Power on headset to turn it connectable to device.  
2. When there is only one device in connectivity record, power on headset and it will auto turn connectable if no device is connected within 10s. When there are two or more device, power on and it will do within 20s.  
3. Or you can press and hold MFB for 5s to power on and turn it connectable directly.

**Bluetooth Connection:**  
On device, search QCY H4 and tap to connect.

**Factory Reset:**  
Press and hold MFB and ANC for 3s(LED turns on white for 2s).

**Multi-Point Connection**

This function is activated by default.  
1. Power on headset and connect it to Device1.  
2. Disconnect it from Device1 and it will auto turn connectable. On Device2, search QCY H4 and tap to connect.  
3. On Device1, tap QCY H4 to connect.

**Functions**

Physical Buttons	
Answer/end call	Press MFB
Ignore call	Press and hold MFB for 1s
Playback/pause	Press MFB
Skip track forward	Double press MFB
Skip track backward	Triple press MFB
Volume up	Press Vol button
Volume down	Press and hold Vol button (two levels dropping per second)
Switch mode	Press ANC button to switch among ANC ON, ANC OFF and Transparency

Touch Pad	
Quick transparency mode	Keep touching to enter and release to quit
Gaming mode	Double touch
Voice assistant	Triple touch

**Warranty Card**

**Warranty Period**  
12 months after you purchase this item (or you may inquire your local shopper for more details).  
**Free Service:**  
Supposing any defects caused by quality issues occur within the warranty period, please take this warranty card and purchase receipts to your distributor for free exchange service.

Model Number:
Date of Purchasing:
User's Name:
User's Phone:
User's Address:
Shop's Name:
Shop's Address:
Comments:

Free exchange service will not be accessed under following circumstances:  
1. Damages caused unauthorized disassembly.  
2. Defects or physical damages caused by leaking or dropping off.  
3. Damages by act of God. Supposing your item is within any damages or defects except the above circumstances, please return to us or your distributor for free repairing.

**FCC Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Tips**

1. Before using the earbuds, please read the manual carefully and keep it for future references.
2. The earbuds need to be fully charged prior to first-time use.
3. If the earbuds are left unused for over two weeks, please recharge.
4. Please use the chargers made by qualified manufacturer.
5. If earbuds fail to be found by phone, please re-turn them connectable or restore factory settings. If a program error of phone occurs, please turn off and on Bluetooth function or reboot the phone.

**Caveats**

1. Never disassemble or modify your earbuds for any reasons to avoid any damages and danger.
  2. Do not store the earbuds in extreme temperatures (under 0°C or over 45°C).
  3. Avoid using the indicator close to the eyes of children or animals.
  4. Do not use the earbuds during a thunderstorm to avoid dysfunction and increasing risk of electric shock.
  5. Do not use harsh chemicals or strong detergents to clean the earbuds.
- Note: please do not use earbuds for a long time as may damage your hearing.

Notes: Please arrange using time properly as your hearing may be damaged by using the device for a long time.  
Manufacturer: Dongguan Hele Electronics Co., Ltd.  
Address: No. 325 Yuehui Rd. Daojiao Town Dongguan City Guangdong Province China

